



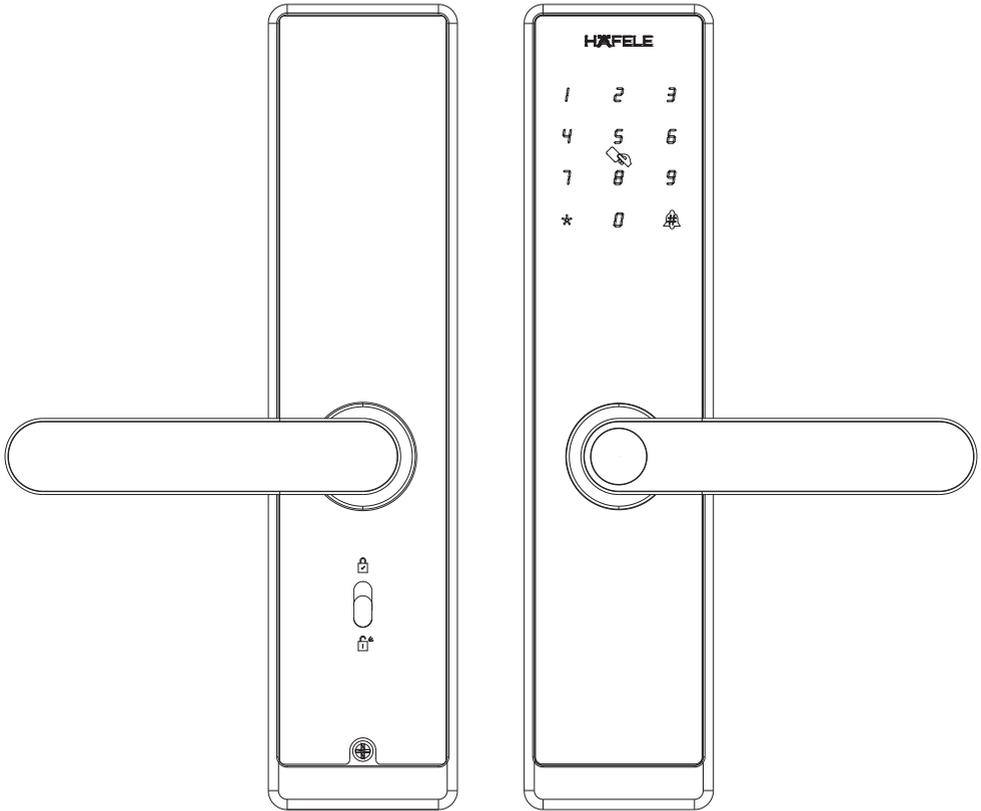


Digital door lock Model DL6110




DL6110 Installation guide

Product Specification

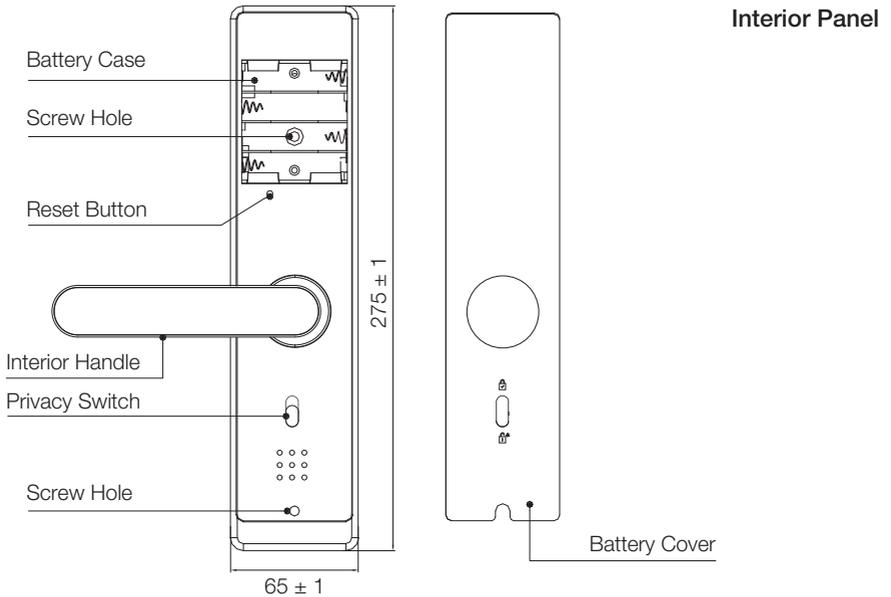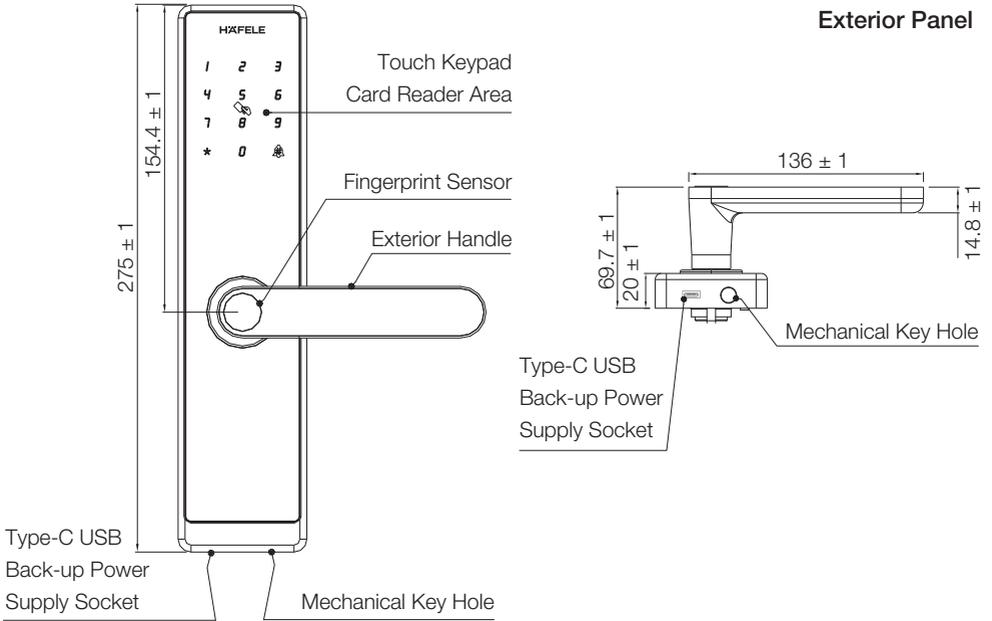


✓ Product Specification

Small mortise lock AP5050

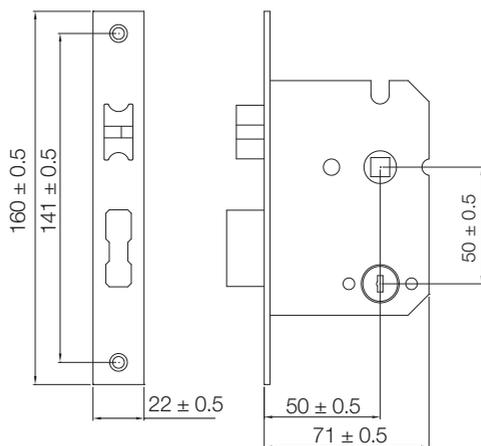

Big mortise lock AP6085

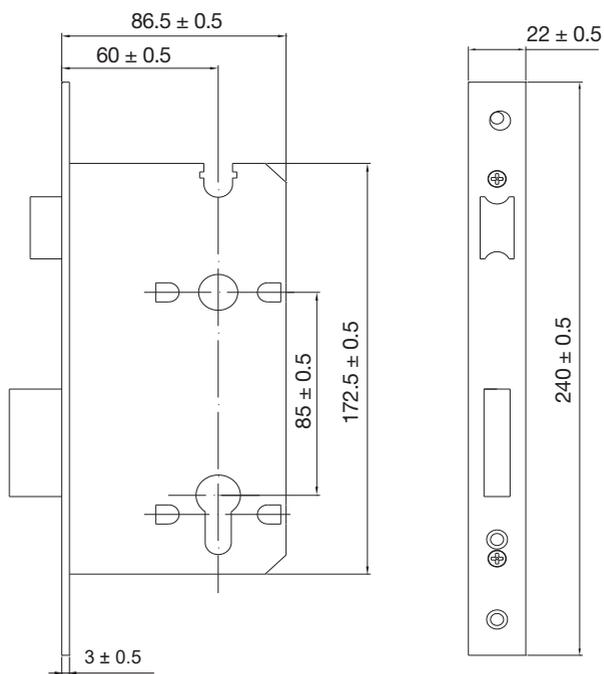


Read before using

✓ Reverse exterior lever handle


⚠ CAUTION

Make sure the lock is locked before reversing the lever handle. If you are not sure whether it is locked, please confirm by power on the lock and unlock once. After hearing the clutch is restored to the normally closed state, cut off of power by unloading the batteries and pull out the mechanical key.

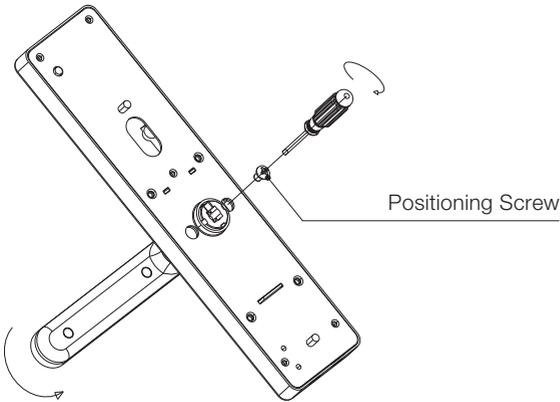


1. Loosen positioning screw
2. Turn the handle 180° from downside to reverse the handle.
3. Fix it by positioning screw according to below diagram.

For right-hand open

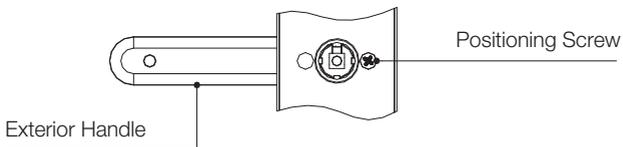


For left-hand open

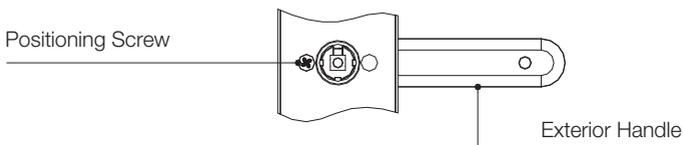


✓ Cut Spindle And Screw

Cut Spindle

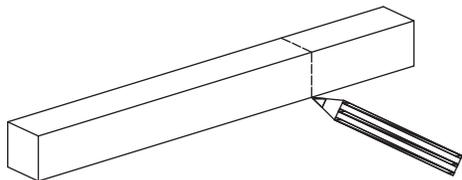


1. Use below template and mark a cutting line on the spindle according to the door thickness.

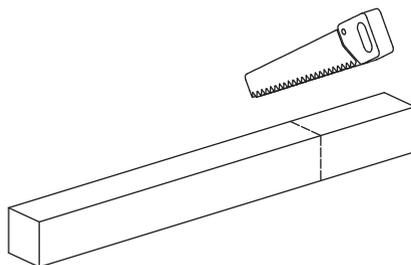


2. Cut the spindle.

Cut Screw

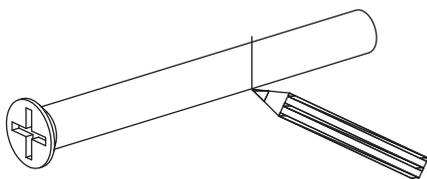

1. Use below template and mark a cutting line on the Screw according to the door thickness.

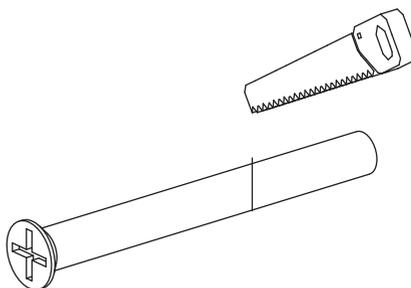


2. Cut the Screw.


✓ Cut Spindle And Screw

For door thickness: 30-40mm


Spindle (1PC)




Stud (2PCS)



Screw ① (1PC)




Screw ② (1PC)




For door thickness: 40-50mm


Spindle (1PC)




Stud (2PCS)




Screw ① (1PC)



Screw ② (1PC)




✓ Assembly Illustration

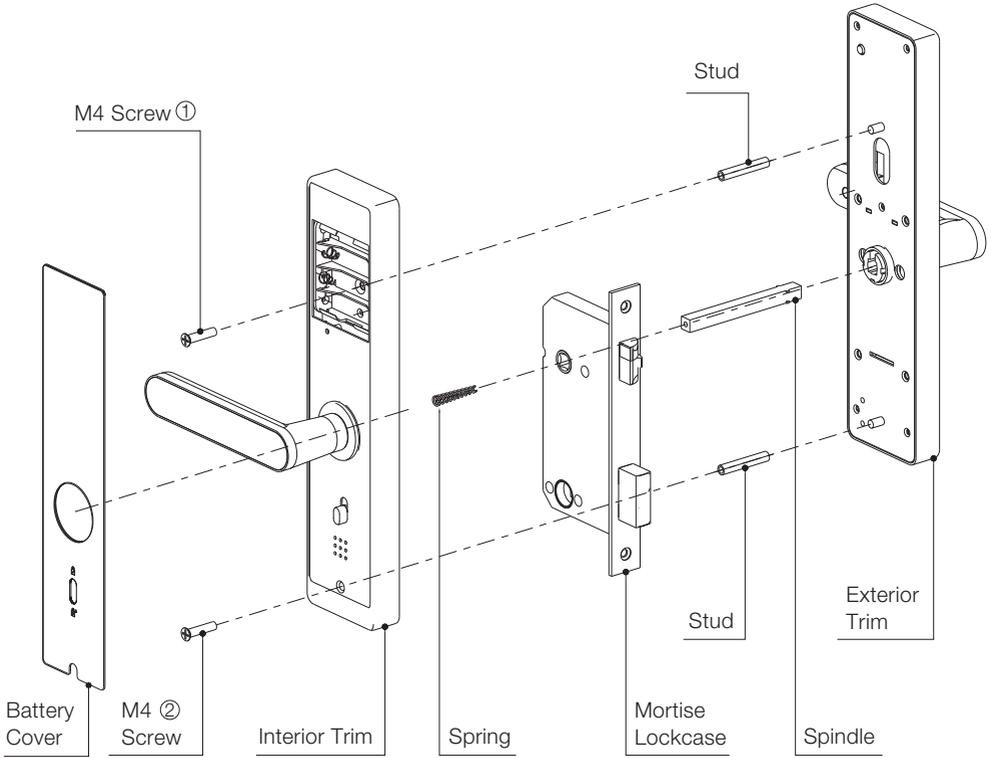


*Please install big end into the back panel

How to install


Install Mortise Lock

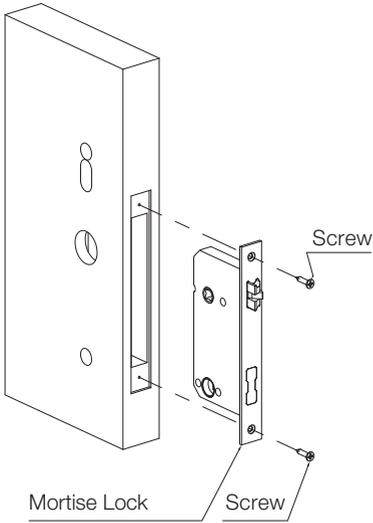


Install Mortise Lock

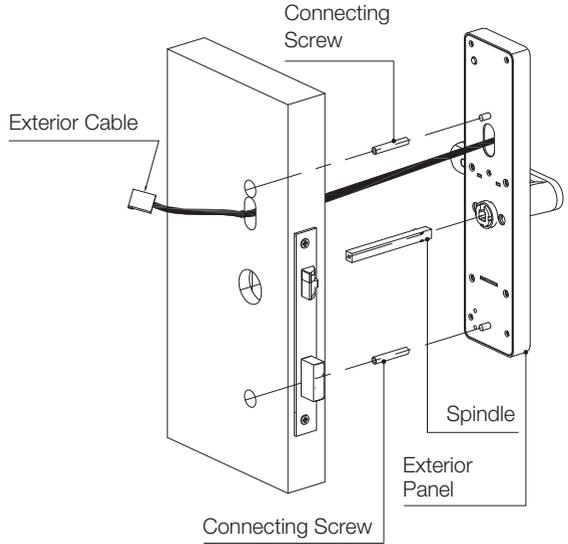

Install Interior Panel

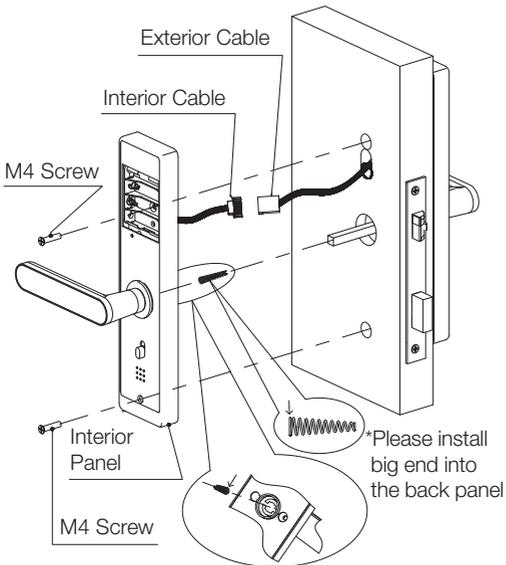

Install Battery cover

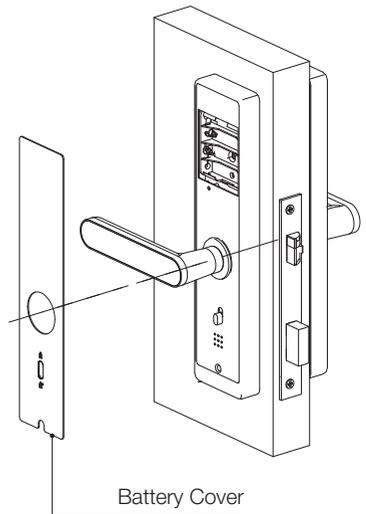

HÄFELE